



User Manual

Washer — Ultra Dry

**WUD718, WUD725, WUD730,
WUD745, WUD760, WUD775**

Type W3...



**438909646/US
2022.08.05**

CONTACT:

461 Doughty Blvd
Inwood, NY 11096-0338
Tel: 516-371-4400
Fax: 516-371-4204
Email: sales@laundrylux.com

TECH SUPPORT:

Tel: 516-371-0700
Fax: 516-371-4029
Email: techcare@laundrylux.com

PARTS:

Tel: 516-371-2000
Fax: 516-371-4029
Email: parts@laundrylux.com

WARRANTY CLAIMS

Wascomat's Technical Support Staff will honor valid manufacturer's parts warranty claims providing your Wascomat machines are registered for warranty coverage upon installation. If they are not registered, you can validate your warranty claim by providing information about when and where you purchased the Wascomat machine(s), the model and serial number(s). Additional warranty proof may also be required.

WARNING: ALL OPERATING AND MAINTENANCE PROCEDURES SHOWN ON THE NEXT PAGE OF THIS MANUAL MUST BE FOLLOWED DAILY FOR PROPER OPERATION OF YOUR MACHINE.

MAKE CERTAIN TO KEEP THIS MANUAL IN A SECURE PLACE FOR FUTURE REFERENCE.

PLEASE ENTER THE FOLLOWING INFORMATION AS IT APPEARS ON THE MACHINE(S) DATA PLATE(S).

MACHINE TYPE OR MODEL	
MACHINE SERIAL NUMBER(S)	
ELECTRICAL CHARACTERISTICS: _____ VOLTS, _____ PHASE, _____ HZ.	

IMPORTANT SAFETY INSTRUCTIONS**WARNING -**

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, including the following:

1. Read all instructions before using the appliance.
2. This machine must be securely bolted to an uncovered concrete floor.
3. This machine **MUST** be serviced and operated in compliance with manufacturers instructions.
CHECK DOOR LOCKS EVERY DAY FOR PROPER OPERATION TO PREVENT INJURY OR DAMAGE. IF THE DOOR LOCK FAILS TO OPERATE PROPERLY, PLACE THE MACHINE OUT OF ORDER UNTIL THE PROBLEM IS CORRECTED.
4. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, drycleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
5. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
6. Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during the time.
7. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
8. Before the appliance is removed from service or discarded, remove the door.
9. Do not reach into the appliance if the tub is moving.
10. Do not install or store this appliance where it will be exposed to the weather.
11. Do not tamper with controls.
12. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
13. Changing of fuses inside the washing machine may only be carried out by authorized personnel.
14. This machine **MUST** be connected to a dedicated electrical circuit to which no other lighting unit or general purpose receptacle is connected. Use copper conductor only.

NOTICE TO: OWNERS, OPERATORS AND DEALERS

IMPROPER INSTALLATION AND INADEQUATE MAINTENANCE, POOR HOUSEKEEPING AND WILLFUL NEGLECT OR BYPASSING OF SAFETY DEVICES MAY RESULT IN SERIOUS ACCIDENTS OR INJURY. TO ASSURE THE SAFETY OF CUSTOMERS AND/OR OPERATORS OF YOUR MACHINE, THE FOLLOWING MAINTENANCE CHECKS MUST BE PERFORMED ON A DAILY BASIS.

1. **Prior to operation of the machine**, check to make certain that all operating instructions and warning signs are affixed to the machine and legible. Missing or illegible ones must be replaced immediately. Be sure you have spare signs and labels available at all times. These can be obtained from your dealer.
2. **Check the door safety interlock, as follows:**
 - a. OPEN THE DOOR of the machine and attempt to start in the normal manner:
For coin-operated models, insert the proper coins to start the machine.
For manually operated models, place the ON-OFF switch in the ON position and press the Start switch.

THE MACHINE(S) MUST NOT START !

- b. CLOSE THE DOOR to start machine operation and, while it is operating, attempt to open the door without exerting extreme force on the door handle. The door should remain locked!
If the machine can start with the door open, or can continue to operate with the door unlocked, the door interlock is no longer operating properly. The machine **must** be placed **out of order** and the interlock immediately replaced.
3. DO NOT UNDER ANY CIRCUMSTANCES ATTEMPT TO BYPASS OR REWIRE ANY OF THE MACHINE SAFETY DEVICES AS THIS CAN RESULT IN SERIOUS ACCIDENTS.
4. **Be sure to keep the machine(s) in proper working order:** Follow **all** maintenance and safety procedures. Further information regarding machine safety, service and parts can be obtained from your dealer.
All requests for assistance must include the model, serial number and electrical characteristics as they appear on the machine identification plate. Insert this information in the space provided on the previous page of this manual.
5. **WARNING:** DO NOT OPERATE MACHINE(S) WITH SAFETY DEVICES BYPASSED, REWIRED OR INOPERATIVE! DO NOT OPEN MACHINE DOOR UNTIL DRUM HAS STOPPED ROTATING!

AVERTISSEMENT : TOUTES LES PROCÉDURES DE FONCTIONNEMENT ET DE MAINTENANCE INDiquÉES À LA PAGE SUIVANTE DE CE MANUEL DOIVENT ÊTRE SUIVIES QUOTIDIENNEMENT POUR GARANTIR LE BON FONCTIONNEMENT DE VOTRE MACHINE.

GARDEZ CE MANUEL DANS UN ENDROIT SÉCURISÉ POUR RÉFÉRENCE ULTÉRIEURE.

VEUILLEZ ÉCRIRE LES INFORMATIONS SUIVANTES QUI FIGURENT SUR LA OU LES PLAQUES SIGNALÉTIQUES DE LA OU DES MACHINES.

TYPE OU MODÈLE DE MACHINE	
NUMÉRO(S) DE SÉRIE DE LA OU DES MACHINES	
CARACTÉRISTIQUES ÉLECTRIQUES : _____ VOLTS, _ _____ PHASES, _____ HZ.	

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT -

Pour réduire le risque d'incendie, de choc électrique ou de blessures aux personnes lors de l'utilisation de votre appareil, y compris les points suivants :

1. Lisez toutes les instructions avant d'utiliser l'appareil.
2. Cette machine doit être solidement boulonnée sur un sol en béton non recouvert.
3. Cette machine DOIT être entretenue et utilisée conformément aux instructions du fabricant.
VÉRIFIEZ TOUS LES JOURS LE VERROUILLAGE DE LA PORTE POUR GARANTIR UN BON FONCTIONNEMENT ET ÉVITER LES BLESSURES OU LES DOMMAGES. SI LE VERROUILLAGE DE LA PORTE NE FONCTIONNE PAS CORRECTEMENT, PLACEZ LA MACHINE HORS SERVICE JUSQU'À CE QUE LE PROBLÈME SOIT CORRIGÉ.
4. Ne lavez pas les articles qui ont été préalablement nettoyés, lavés, imbibés ou repérés à l'aide d'essence, de solvants pour nettoyage à sec ou d'autres substances inflammables ou explosives, car ces articles dégagent des vapeurs susceptibles de s'enflammer ou d'exploser.
5. N'ajoutez pas d'essence, de solvants pour nettoyage à sec ou d'autres substances inflammables ou explosives à l'eau de lavage. Ces substances dégagent des vapeurs qui pourraient s'enflammer ou exploser.
6. Dans certaines conditions, de l'hydrogène gazeux peut être produit dans un système d'eau chaude qui n'a pas été utilisé pendant des semaines ou plus. L'HYDROGÈNE EST UN GAZ EXPLOSIF. Si le système d'eau chaude n'a pas été utilisé pendant une telle période, avant d'utiliser un lave-linge, ouvrez tous les robinets d'eau chaude et laissez l'eau couler pendant plusieurs minutes. Ceci permet de libérer toute accumulation d'hydrogène. Comme le gaz est inflammable, ne fumez pas ou n'utilisez pas de flamme nue pendant ce temps.
7. Ne laissez pas les enfants jouer sur ou dans l'appareil. Une surveillance étroite des enfants est nécessaire lorsque l'appareil est utilisé à proximité d'enfants.
8. Avant de mettre l'appareil hors service ou de le mettre au rebut, retirez la porte.
9. Ne touchez pas à l'intérieur de l'appareil si la cuve se déplace.
10. N'installez pas et ne rangez pas cet appareil dans un endroit exposé aux intempéries.
11. N'altérez pas les commandes.
12. Ne réparez pas l'appareil et ne remplacez aucune pièce de l'appareil ; n'essayez pas non plus d'effectuer l'entretien à moins que ces mesures soient spécifiquement recommandées dans les instructions d'entretien de l'utilisateur ou dans les instructions de réparations destinées à l'utilisateur à condition que vous les compreniez et possédiez les compétences requises pour les mener à bien.
13. Le remplacement des fusibles à l'intérieur du lave-linge ne peut être effectué que par du personnel autorisé.
14. Cette machine DOIT être connectée à un circuit électrique dédié auquel aucune autre unité d'éclairage ou prise polyvalente n'est connectée. N'utilisez que des conducteurs en cuivre.

NOTICE POUR : LES PROPRIÉTAIRES, OPÉRATEURS ET REVENDEURS

UNE INSTALLATION INCORRECTE, UNE MAINTENANCE INADÉQUATE, UN MAUVAIS ENTRETIEN MÉNAGER ET LA NÉGLIGENCE VOLONTAIRE OU LE CONTOURNEMENT DES DISPOSITIFS DE SÉCURITÉ PEUVENT ENTRAÎNER DES ACCIDENTS OU DES BLESSURES GRAVES. POUR ASSURER LA SÉCURITÉ DES CLIENTS ET/OU DES OPÉRATEURS DE VOTRE MACHINE, LES CONTRÔLES DE MAINTENANCE SUIVANTS DOIVENT ÊTRE EFFECTUÉS SUR UNE BASE QUOTIDIENNE.

1. **Avant de faire fonctionner la machine**, vérifiez que toutes les instructions de fonctionnement et tous les panneaux d'avertissement sont apposés sur la machine et lisibles. Les informations manquantes ou illisibles doivent être remplacées immédiatement. Assurez-vous de toujours disposer de panneaux et d'étiquettes de remplacement. Vous pouvez les obtenir auprès de votre revendeur.
2. **Vérifiez le verrouillage de sécurité de la porte en procédant comme suit:**
 - a. OUVREZ LA PORTE de la machine et essayez de démarrer la machine de la manière normale :
Pour les modèles à pièces, insérez les pièces nécessaires pour démarrer la machine.
Pour les modèles actionnés manuellement, placez l'interrupteur ON-OFF sur la position ON et appuyez sur l'interrupteur Démarrer.

LA MACHINE NE DOIT PAS DÉMARRER !

- b. FERMEZ LA PORTE pour démarrer la machine et, pendant qu'elle fonctionne, essayez d'ouvrir la porte sans exercer une force trop importante sur la poignée de porte. La porte doit rester verrouillée !
Si la machine peut démarrer avec la porte ouverte, ou peut continuer à fonctionner avec la porte déverrouillée, le dispositif de verrouillage de la porte ne fonctionne plus correctement. La machine **doit** être mise **hors service** et le dispositif de verrouillage doit être remplacé immédiatement.
3. N'ESSAYEZ DANS AUCUNE CIRCONSTANCE DE CONTOURNER OU DE MODIFIER LES DISPOSITIFS DE SÉCURITÉ DE LA MACHINE, CECI POUVANT ENTRAÎNER DES ACCIDENTS GRAVES.
4. **Assurez-vous de garder la ou les machines en bon état de fonctionnement** : Suivez **toutes** les procédures de maintenance et de sécurité. De plus amples informations concernant la sécurité de la machine, la maintenance et les pièces peuvent être obtenues auprès de votre revendeur.
Toutes les demandes d'assistance doivent comporter le modèle, le numéro de série et les caractéristiques électriques indiqués sur la plaque d'identification de la machine. Écrivez ces informations dans l'espace prévu cet effet à la page précédente de ce manuel.
5. **AVERTISSEMENT** : NE FAITES PAS FONCTIONNER LA OU LES MACHINES AVEC DES DISPOSITIFS DE SÉCURITÉ CONTOURNÉS, MODIFIÉS OU INUTILISABLES ! N'OUVREZ LA PORTE DE LA MACHINE QUE LORSQUE LE TAMBOUR A ARRÊTÉ DE TOURNER !

ADVERTENCIA: TODOS LOS PROCEDIMIENTOS DE MANEJO Y MANTENIMIENTO QUE APARECEN EN LA SIGUIENTE PÁGINA DE ESTE MANUAL DEBERÁN SEGUIRSE DIARIAMENTE PARA EL CORRECTO FUNCIONAMIENTO DE LA MÁQUINA.

ASEGÚRESE DE CONSERVAR ESTE MANUAL EN UN LUGAR SEGURO PARA CONSULTARLO EN EL FUTURO.

INTRODUZCA LA SIGUIENTE INFORMACIÓN TAL Y COMO APARECE EN LAS PLACAS DE DATOS DE LA MÁQUINA.

TIPO O MODELO DE MÁQUINA	
NÚMERO DE SERIE DE LA MÁQUINA	
CARACTERÍSTICAS ELÉCTRICAS: _____ VOLTIOS, _ _____ FASE, _____ HZ.	

INSTRUCCIONES IMPORTANTES SOBRE SEGURIDAD**ADVERTENCIA:**

Para reducir el riesgo de incendio, descarga eléctrica o lesiones personales al utilizar el dispositivo, incluyendo lo siguiente:

1. Lea las instrucciones antes de utilizar el dispositivo.
2. Esta máquina debe fijarse de forma segura a un suelo de hormigón visto.
3. Esta máquina DEBE repararse y utilizarse según se indica en las instrucciones del fabricante.
COMPROBAR CADA DÍA QUE LOS CIERRES DE LA PUERTA FUNCIONAN CORRECTAMENTE PARA PREVENIR LESIONES O DAÑOS. SI EL CIERRE DE LA PUERTA NO FUNCIONA CORRECTAMENTE, DEJAR LA MÁQUINA FUERA DE SERVICIO HASTA QUE SE SOLUCIONE EL PROBLEMA.
4. No lavar artículos que se hayan limpiado previamente, lavado, sumergido o rociado con gasolina, disolventes para lavado en seco u otras sustancias inflamables o explosivas, ya que podrían desprender vapores que pudieran incendiarse o explotar.
5. No añadir gasolina, disolventes para lavado en seco u otras sustancias inflamables o explosivas al agua de lavado. Estas sustancias desprenden vapores que podrían incendiarse o explotar.
6. Bajo ciertas condiciones, puede producirse gas hidrógeno en un sistema de agua caliente que no se ha utilizado durante semanas o meses. **EL GAS HIDRÓGENO ES EXPLOSIVO.** Si no se ha utilizado el sistema de agua caliente durante un período tan largo de tiempo, antes de usar la máquina poner en marcha todas las instalaciones de agua caliente y dejar correr el agua durante varios minutos. Se liberará así el gas hidrógeno acumulado. Como el gas es inflamable, no fumar ni usar una llama abierta durante este tiempo.
7. No permitir que los niños jueguen con o cerca del dispositivo. Es necesaria una supervisión férrea de los niños si se usa el dispositivo cerca de ellos.
8. Antes de llevar la máquina a reparar o de desecharla, retirar la puerta.
9. No tocar la máquina si la cuba se está moviendo.
10. No instalar ni almacenar esta máquina en lugares en que quede expuesta a las inclemencias del tiempo.
11. No manipular con los controles.
12. No reparar ni sustituir ninguna pieza de la máquina ni tratar de realizar ningún tipo de mantenimiento salvo que se recomiende expresamente en las instrucciones de mantenimiento para el usuario o en las instrucciones de reparación para el usuario publicadas, y las entienda y cuente con las habilidades necesarias para llevar a cabo esas tareas.
13. El cambio de los fusibles de la lavadora sólo deberá realizarlo personal autorizado.
14. Esta máquina DEBE conectarse a un circuito eléctrico especializado al que no estará conectada ninguna otra unidad de iluminación ni ningún recipiente de uso general. Usar únicamente un conductor de cobre.

AVISO PARA: PROPIETARIOS, OPERADORES Y DISTRIBUIDORES

UNA INSTALACIÓN INCORRECTA Y UN MANTENIMIENTO INADECUADO, UNA MALA CONSERVACIÓN Y LA OMISIÓN DELIBERADA O PUENTE DE LOS DISPOSITIVOS DE SEGURIDAD PODRÍA RESULTAR EN ACCIDENTES O LESIONES GRAVES. PARA GARANTIZAR LA SEGURIDAD DE LOS CLIENTES Y/O LOS OPERADORES DE SU MÁQUINA, DEBERÁN REALIZARSE LAS COMPROBACIONES DE MANTENIMIENTO SIGUIENTES A DIARIO.

1. **Antes de poner en marcha la máquina**, comprobar que todas las instrucciones de funcionamiento y señales de advertencia están acopladas a la máquina y son legibles. Las que falten o sean ilegibles deberán reemplazarse inmediatamente. Asegúrese de que dispone de signos y etiquetas de repuesto disponibles en todo momento. Puede adquirirlas de su distribuidor.
2. **Compruebe el cierre de seguridad de la puerta, como sigue:**
 - a. ABRA LA PUERTA de la máquina y trate de ponerla en marcha como haría normalmente:
En los modelos que funcionan con monedas, inserte las monedas correspondientes para ponerla en marcha.
En los modelos de funcionamiento manual, coloque el interruptor ON-OFF en la posición ON y pulse el interruptor START.

¡LA MÁQUINA NO DEBE PONERSE EN MARCHA!

- b. CIERRE LA PUERTA para poner en marcha la máquina y, mientras está funcionando, trate de abrir la puerta sin ejercer una fuerza excesiva sobre el asa. ¡La puerta debe mantenerse cerrada!
Si la máquina puede ponerse en marcha con la puerta abierta, o puede continuar funcionando con la puerta desbloqueada, el cierre no está funcionando correctamente. La máquina **debe** dejarse **fuera de servicio** y el cierre debe reemplazarse inmediatamente.
3. NO TRATE, BAJO NINGUNA CIRCUNSTANCIA, DE PUENTEAR O VOLVER A CABLEAR NINGUNO DE LOS DISPOSITIVOS DE SEGURIDAD DE LA MÁQUINA, YA QUE PODRÍAN PRODUCIRSE ACCIDENTES GRAVES.
4. **Asegúrese de mantener las máquinas en funcionamiento:** Siga **todos** los procedimientos de mantenimiento y seguridad. Puede obtener más información sobre la seguridad de la máquina, su mantenimiento y piezas de repuesto de su distribuidor.
Todas las solicitudes de asistencia deben incluir el modelo, número de serie y características eléctricas tal y como aparecen en la placa de identificación de la máquina. Introduzca esta información en el espacio correspondiente en la página anterior de este manual.
5. **ADVERTENCIA:** ¡NO PONGA EN MARCHA LA MÁQUINA CON LOS DISPOSITIVOS DE SEGURIDAD PUENTEADOS, RE-CLABEADOS O INOPERATIVOS! ¡NO ABRA LA PUERTA DE LA MÁQUINA HASTA QUE EL TAMBOR HAYA DEJADO DE GIRAR!

NOTICE TO INSTALLER

Improper installation of this machine:

- May cause serious damage to the machine.
- May result in other property damage.
- May cause personal injury.
- Will void the manufacturer's warranty.

Improper fastening of this machine to its foundation, inferior foundation materials, an undersized foundation, the use of fabricated steel bases not provided by Wascomat or its approved supplier(s), the use of an improper type, number, or size of mounting bolts, or failure to use proper hardware on mounting bolts may result in damage to the machine that will not be covered by the manufacturer's warranty.

Connection to line Voltage or over-current protection devices other than those specified on the data plate may result in severe damage to machine components, and will void the manufacturer's warranty.

Refer to complete installation instructions provided in manuals accompanying the machine.

Contact Wascomat Technical Support with any questions BEFORE installing this machine.

Damage resulting from inadequate installation materials or improper installation techniques will void the manufacturer's warranty.

Contents

Contents

1	Safety Precautions	15
1.1	General safety information	15
1.2	Commercial use only	15
1.3	Symbols	16
2	Program description	17
2.1	General	17
2.2	Program description	17
2.3	Option buttons	18
3	Handling	19
3.1	Load	19
3.2	Detergent	19
3.3	How to start the machine	21
3.3.1	OPL	21
3.3.2	Coin operated machines	22
3.4	Additional functions	23
3.5	When program has ended	24
4	Timer	25
5	Error codes	26
6	Maintenance	27
6.1	General	27
6.2	Time for maintenance	27
6.3	Every day	27
6.4	Detergent container	27
6.4.1	Deliming	27
6.5	Drain	27
6.6	Water inlet	28
6.7	Cleaning the mop elements	28
6.8	Maintenance to be carried out by qualified service personnel	28
7	Disposal information	29
7.1	Disposal of appliance at end of life	29
7.2	Disposal of packing	29

The manufacturer reserves the right to make changes to design and component specifications.

1 Safety Precautions

- Servicing shall be carried out only by authorized personnel.
- Only authorized spare parts, accessories and consumables shall be used.
- Only use detergent intended for water-wash of textiles. Never use dry cleaning agents.
- The machine shall be connected with new water hoses. Re-used water hoses must not be used.
- The machine's door lock must under no circumstances be bypassed.
- If the machine develops a fault, this must be reported to the person in charge as soon as possible. This is important both for your safety and that of others.
- DO NOT MODIFY THIS APPLIANCE.
- When performing service or replacing parts, the power must be disconnected.
- When the power is disconnected, the operator must see that the machine is disconnected (that the plug is removed and remains removed) from any point to which he has access. If this is not possible, due to the construction or installation of the machine, a disconnection with a locking system in the isolated position shall be provided.
- In accordance with the wiring rules: mount a multi-pole switch prior to the machine to facilitate installation and service operations.
- If different rated voltages or different rated frequencies (separated by a /) are stated at the machine data plate, instructions for adjusting the appliance for operation at the required rated voltage or rated frequency are stated in the installation manual.
- Stationary appliances not fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III, the instructions state that means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- The openings in the base, shall not be obstructed by a carpet.
- Maximum mass of dry cloth: WUD718: 8 kg / 18 lbs, WUD725: 11 kg / 25 lbs, WUD730: 14 kg / 30 lbs, WUD745: 20 kg / 45 lbs, WUD760: 27 kg / 60 lbs, WUD777: 33 kg / 75 lbs.
- A-weighted emission sound pressure level at working stations:
 - Wash: WUD718: <70 dB(A), WUD725: <70 dB(A), WUD730: <70 dB(A), WUD745: <70 dB(A), WUD760: <70 dB(A), WUD777: <70 dB(A).
 - Extraction: WUD718: <70 dB(A), WUD725: <70 dB(A), WUD730: <70 dB(A), WUD745: <70 dB(A), WUD760: <70 dB(A), WUD777: <70 dB(A).
- Maximum inlet water pressure: 1000 kPa / 145 psi
- Minimum inlet water pressure: 50 kPa / 8 psi

1.1 General safety information

The machine is only intended for water-wash use.

Do not hose down the machine with water.

In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.

1.2 Commercial use only

The machine/machines covered by this manual is/are made for commercial and industrial use only.

1.3 Symbols

	Caution
	Caution, high voltage
	Read the instructions before using the machine

2 Program description

2.1 General

The machine is equipped with a number of programs adapted to the range of use to which the machine is intended — different segments use different programs.

It is recommended to follow the care labelling of the garment as far as possible.

2.2 Program description

The following table shows some examples of available programs:

Program
COLD ENERGY
WARM ENERGY
HOT ENERGY
DELICATES

The following table shows some examples of available programs used on coin operated machines:

Program
COLD
WARM
HOT
QUICK WASH
DELICATE

2.3 Option buttons

The following table shows the available options and a short description of those:

Option button		Description
	HEAVY SOIL	Long wash for heavy soiled textiles.
	EXTRA RINSE	One rinse is added.

3 Handling

3.1 Load

Load the goods into the machine according to recommendations and close the door.

Recommended maximum load	
WUD718	8 kg
WUD725	11 kg
WUD730	14 kg
WUD745	20 kg
WUD760	27 kg
WUD777	33 kg

3.2 Detergent

Depending on machine type the detergent container is located on top of the machine or on the front of the machine.

Detergent container on top of the machine

Add the correct amount of detergent, bleach and softener according to recommendations.
(Not valid if automatic dosing is used).

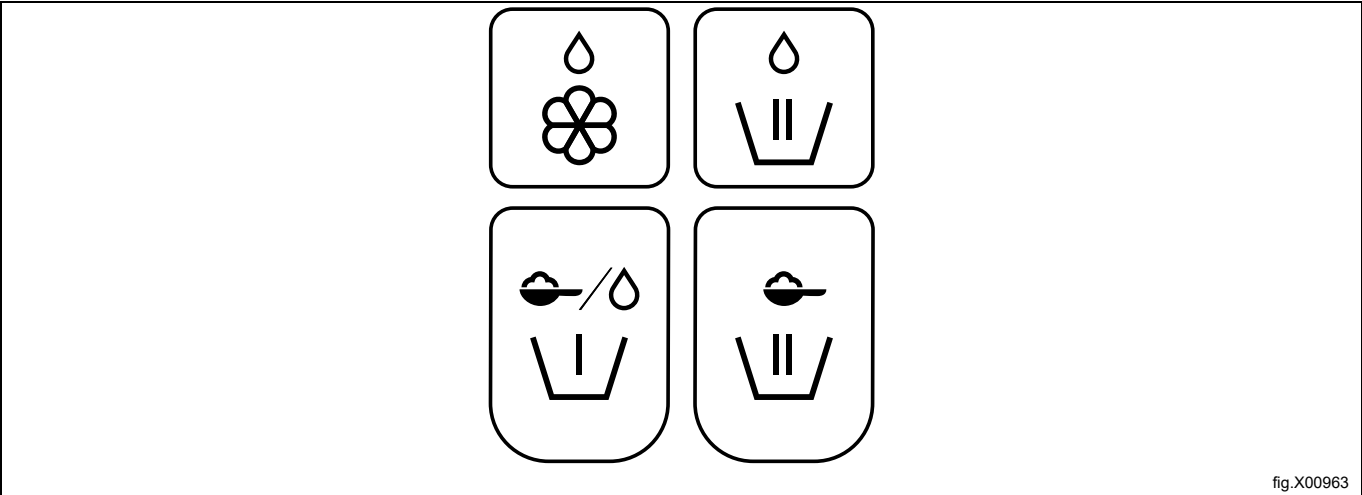 


fig.X00963

	Softener, liquid.
	Main wash, liquid chemicals. Alt. for mop machines, liquid mop chemicals in last rinse.
	Pre-wash, powder or liquid detergent.
	Main wash, powder detergent.

Note!

Make sure no detergent spills out on the floor causing risk of slipping and falling.

 
Note!

If bleach is used, be careful when handling liquid bleach. Take care when opening the detergent container and when filling the compartment with liquid bleach. Avoid splashing due to the risk of getting liquid bleach in your eyes.

3.3 How to start the machine

This manual cover different types of machine models. Check the panel on your machine and follow the description for your type of machine.

3.3.1 OPL

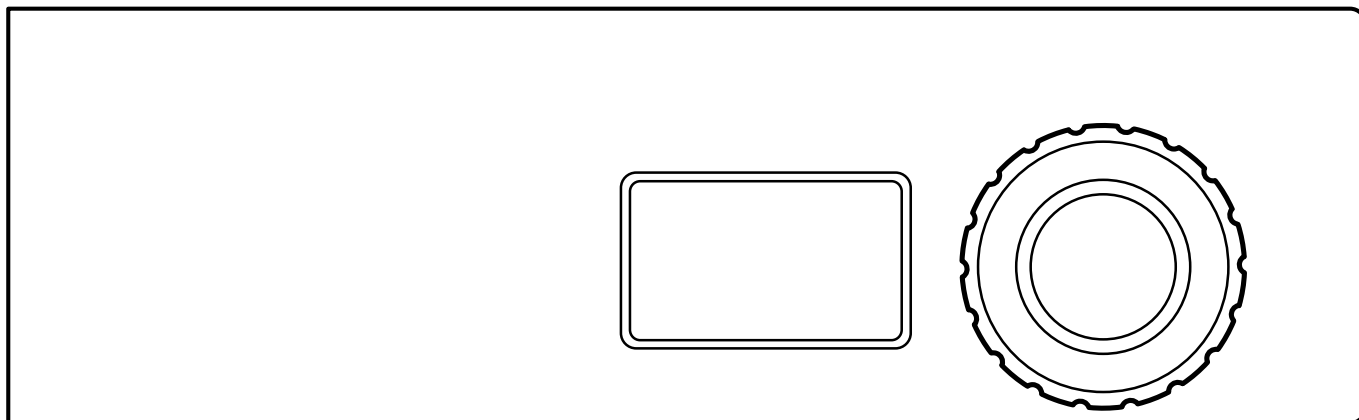


Select program by turning the control knob.

Example of programs
COLD ENERGY WARM ENERGY HOT ENERGY DELICATES

Start the machine by pressing the control knob.

The machine will start by weighing the load with an extraction. The program will then adapt to the load to give an optimal result. (Only on certain programs / machines).

 3.3.2 Coin operated machines

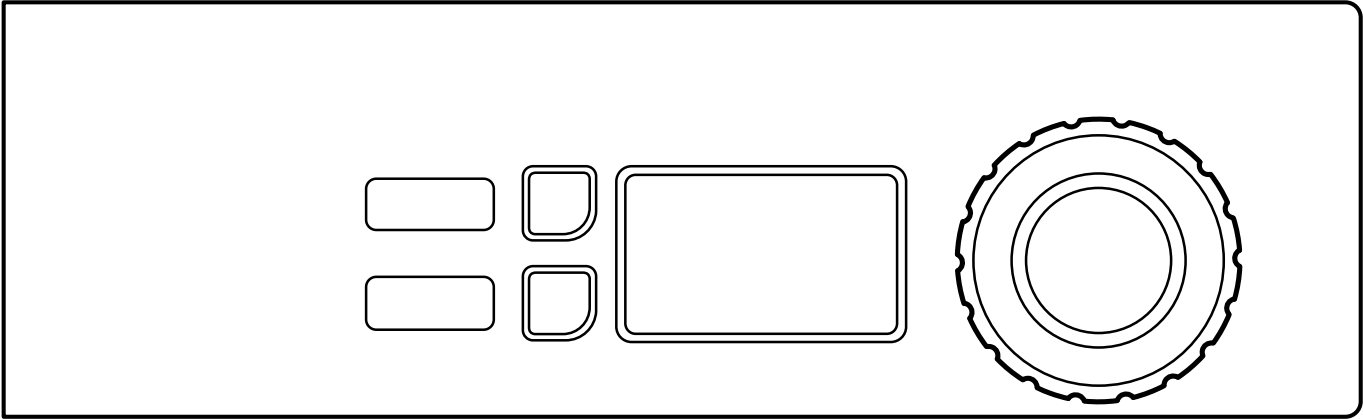

Select program by turning the control knob.
It is also possible to select options.

Note!
Some programs do not allow options.

Example of programs	Options	
COLD WARM HOT QUICK WASH DELICATE		HEAVY SOIL
		EXTRA RINSE

Insert correct amount of coins to start the machine. (On some machines you also need to press the control knob to start the machine).

3.4 Additional functions

There is a menu with additional functions available for selection after start. When pressing the control knob / start button (on machines without control knob) the menu will appear on the display. Select from the menu by turning the control knob / pressing the temperature button/-s and press the control knob / start button to activate.

Note!

Some of the functions may not be available or active on your machine.

Stop function

If the machine is programmed with this function, it is possible to stop the machine during program run by pressing the control knob.

When pressing the control knob again the program will continue.

Pause

It is possible to pause an ongoing program.

Select **PAUSE** and activate.

When pressing the control knob / start button again the program will continue.

The door can be opened after a short while if the water level is not too high. Close the door and press the control knob / start button to continue.

Changing a program after start

It is possible to change a program after start.

Select **CHANGE PROGRAM** and activate.

When pressing the control knob / start button the program menu will be displayed. Select a new program and start by pressing the control knob / start button.

Rapid advance

Select **RAPID ADVANCE** and activate.

When pressing the control knob / start button a list with all program steps will be displayed. Select desired program step from the list by turning the control knob / pressing the temperature button/-s and press the control knob / start button to activate.

End a program

It is possible to end a program after start.

Select **END PROGRAM** and activate.

When pressing the control knob / start button the program will be ended. When the water is drained the door will be unlocked.

Delayed start

If the machine has this function, it is possible to delay the start of a program.

After program selection, press the control knob / start button. A menu will appear on the display. Turn the control knob / press the temperature button/-s to activate the function. Set the day and time for the delayed start with the control knob / pressing the temperature button/-s.

Press the control knob / start button to confirm the settings.

Status

Select **STATUS MENU** and activate.

The status menu shows the status for water temperature, water level and drum speed for the machine.

Statistics

Select **STATISTICS** and activate.

The statistics menu shows total run hours and trip run hours for the machine.

Auto restarts

Select **AUTO RESTARTS** and activate.

Set the number of automatic restarts that the machine will perform of the selected program.

Press the control knob / start button to confirm the settings.

3.5 When program has ended

Leave the door open when ready. This is to prevent that moisture stays in the machine and develop bacteria and mould.

4 Timer

The timer is used to start a part of the program (for example the last rinse of the udder cloth program) after pause on a pre-set time. The time can be set for all days or for selected days.

To program the timer you need to activate the machines service mode.

The service mode is activated by a long press on the control knob.

SERVICE MENU
FUNCTION TEST
CONFIGURATION
PRICE PROGRAMMING
STATISTICS
PROGRAM PARAMETERS
SYSTEM

The following menus are activated by a short press on the control knob.

Activate the PROGRAM PARAMETERS menu.

SERVICE MENU
FUNCTION TEST
CONFIGURATION
PRICE PROGRAMMING
STATISTICS
PROGRAM PARAMETERS
SYSTEM

Activate the SET START AFTER PAUSE menu.

Activate the ADD NEW OCCASION menu.

The display will now show the following submenus:

- BACK
- TIME
- ENABLED
- ALL DAYS
- MONDAY
- TUESDAY
- WEDNESDAY
- THURSDAY
- FRIDAY
- SATURDAY
- SUNDAY
- REMOVE OCCASION

Activate the TIME menu to program the time. Set the time by turning the control knob and save when ready.

Select from the list and activate the day/days one by one by pressing the control knob. A filled square indicates that the day is activated.

Press BACK to exit and save the changes by selecting YES.

Example:

The program is started the day before and will pause before the last rinse.

If the time is set to 04.00 and ALL DAYS is activated, this means that the last rinse on the program will be started at 04.00 all days of the week.

When saved, the programmed time — occasion, will be listed in the SET START AFTER PAUSE menu as a new row.

It is possible to program several times — occasions on the same day.

Up to 10 occasions can be saved in the list.

Press ENABLED to activate or deactivate the selected occasion.

Press REMOVE OCCASION to delete the selected occasion.

5 Error codes

A fault in the program or in the machine is indicated by an error code on the display.
Some of these error codes can be solved easily without contacting service personnel.

Error code	Text	Cause/Action
11:1	NO WATER	Water level acknowledgement not reached in time. Check that the water taps are open.
11:2	DOOR OPEN	Door position acknowledgement not received during program. Open and close the door.
11:3	DOOR LOCK FAIL	Door position acknowledgement not received in time. Open and close the door.
11:10	DRUM NOT DRAINED	Water level above established level after drain. Check that the drain is not blocked. Try to restart the machine.

For other error codes or repeated error codes, disconnect the power for 30 seconds. If the error code keeps coming back, contact authorized service personnel.

6 Maintenance

6.1 General

It is the responsibility of the owner of the machine/the laundry manager to make sure that maintenance is periodically performed.

Note!

Lack of maintenance may deteriorate the performance of the machine and may cause damage to components.

6.2 Time for maintenance

When the display is showing the message `TIME FOR MAINTENANCE` — contact the owner of the machine/the laundry manager to perform maintenance (if available, a telephone number and/or a tag will also be displayed).

The machine can be used meanwhile. However, the message will keep coming back until the service is performed.

The message will disappear after about 30 seconds or if the control knob or any button is pressed.

6.3 Every day

Check that the door is locked during a program. Make sure the door cannot be opened until after the program is complete.

If the door can be opened before program end, the machine must be placed out of order until repairs are made.

Check that the door does not leak.

Clean the door, door glass and door gasket.

Clean the external parts.

6.4 Detergent container

Clean the detergent container at regular basis to avoid that it is being clogged by detergent residue.

6.4.1 Deliming

When deliming is needed:

Use the special machine cleaning program. If it is not available, contact authorized service personnel to get access to the program.

It is also possible to use a program with high temperature, 95°C, for deliming. Add a deliming agent, for example citric acid.

6.5 Drain

At regular basis, check the drain connection, joints in the drain pipe etc and remove any lint and dust. Clean with for example a small brush. When remounting, make sure the connections are tight.

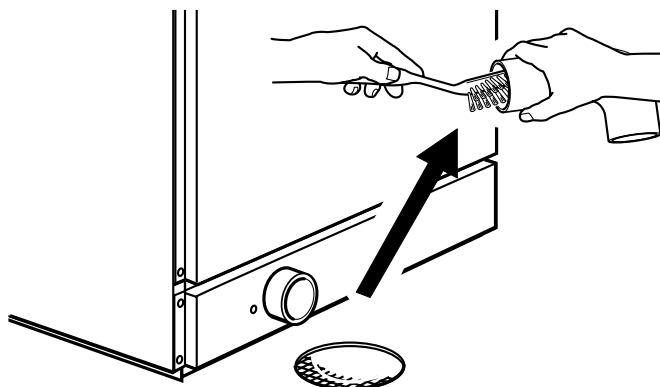 


fig.6998A

Note!

Contact qualified service personnel to perform maintenance on the internal drain and hoses once a year.

6.6 Water inlet

At regular basis, check the filter at the water inlet. Clean if necessary.

Demount the hose to the water inlet and pull out the filter (A).

When remounting, make sure the filter is in position and that the connections are tight.

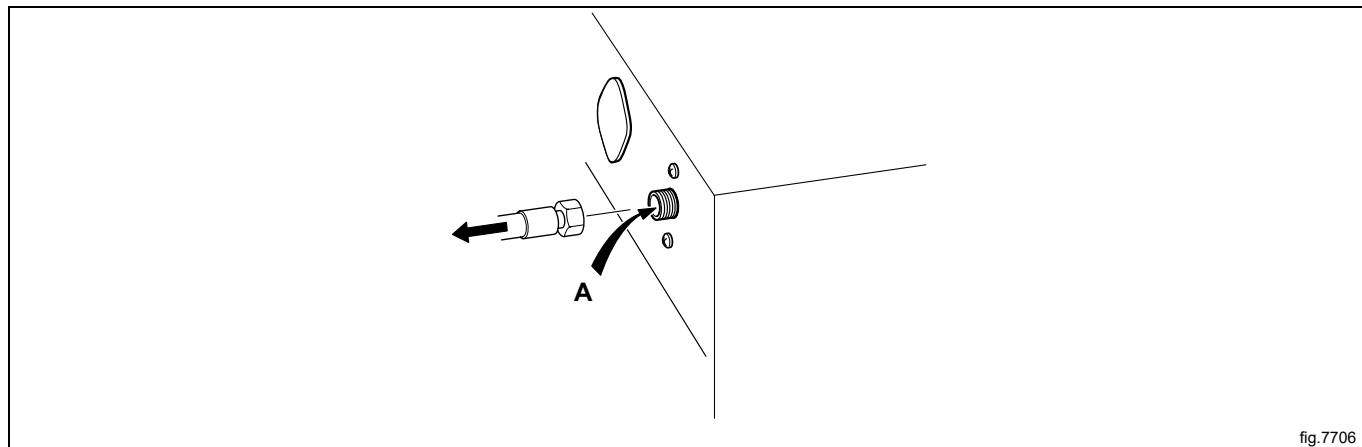 


fig.7706

6.7 Cleaning the mop elements

(Only valid for mop machines).

At regular basis, check the mop elements and clean if necessary.

In the inner drum, there is one or two core covers to the heating elements depending on the size of the machine. The front cover is located directly above the drain and the other is in front of the element retainer. Two small screwdrivers are required to remove the core cover.

Use a screwdriver to press down on the retaining plate in the round hole on the core cover.

Place the other screwdriver in the oval hole on the core cover and through the round hole in the retaining plate.

Push the retaining plate towards the screwdriver which is pressing down on the retaining plate.

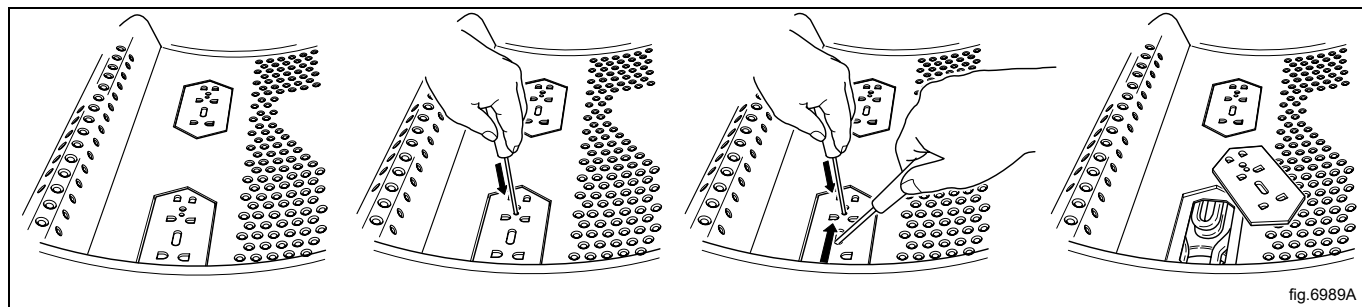 


fig.6989A

Remove the core element/elements and clean the elements. If the elements are very dirty, it may be wise to remove the elements from the drum when cleaning them.

The core covers are refitted in reverse order, with the difference that it is not necessary to press on the retaining plate; you only need to push the retaining plate back into place. When you hear a clicking sound, the retaining plate is in position.

6.8 Maintenance to be carried out by qualified service personnel

Contact qualified service personnel to perform the following maintenance:

Once a year:

- Inspect the interior of the machine during an actual wash cycle to ensure that no leaks are noticed.
- Clean the internal drain and hoses.

7 Disposal information

7.1 Disposal of appliance at end of life

 
Before disposing of the machine, make sure to carefully check its physical condition, and in particular any parts of the structure that can give or break during scrapping.

The machine's parts must be disposed of in a differentiated way, according to their different characteristics (e.g. metals, oils, greases, plastic, rubber, etc.).

Different regulations are in force in the various countries, therefore comply with the provisions of the laws and competent bodies in the country where scrapping takes place.

In general, the appliance must be taken to a specialised collection/scrapping centre.

Dismantle the appliance, grouping the components according to their chemical characteristics, remembering that the compressor contains lubricant oil and refrigerant fluid which can be recycled, and that the refrigerator and heat pump components are special waste assimilable with urban waste.

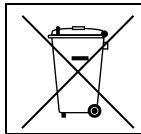

The symbol on the product indicates that this product should not be treated as domestic waste, but must be correctly disposed of in order to prevent any negative consequences for the environment and human health. For further information on the recycling of this product, contact the local dealer or agent, the Customer Care service or the local body responsible for waste disposal.

Note!

When scrapping the machine, any marking, this manual and other documents concerning the appliance must be destroyed.

7.2 Disposal of packing

The packing must be disposed of in compliance with the current regulations in the country where the appliance is used. All the packing materials are environmentally friendly.

They can be safely kept, recycled or burned in an appropriate waste incineration plant. Recyclable plastic parts are marked as following examples.

 PE	Polyethylene: • Outer wrapping • Instructions bag
 PP	Polypropylene: • Straps
 PS	Polystyrene foam: • Corner protectors



www.wascomat.com